



...connecting your business

LANCOM WLC-4006

Quick Reference Guide

 


Please observe the following when setting up the device

- For devices to be operated on the desktop, please attach the adhesive rubber footpads
- Do not rest any objects on top of the device




- Keep the ventilation slots on the side of the device clear of obstruction
- In case of wall mounting, use the drilling template as supplied



- Rack installation with the optional LANCOM Rack Mount (not supplied)



LANCOM
Systems

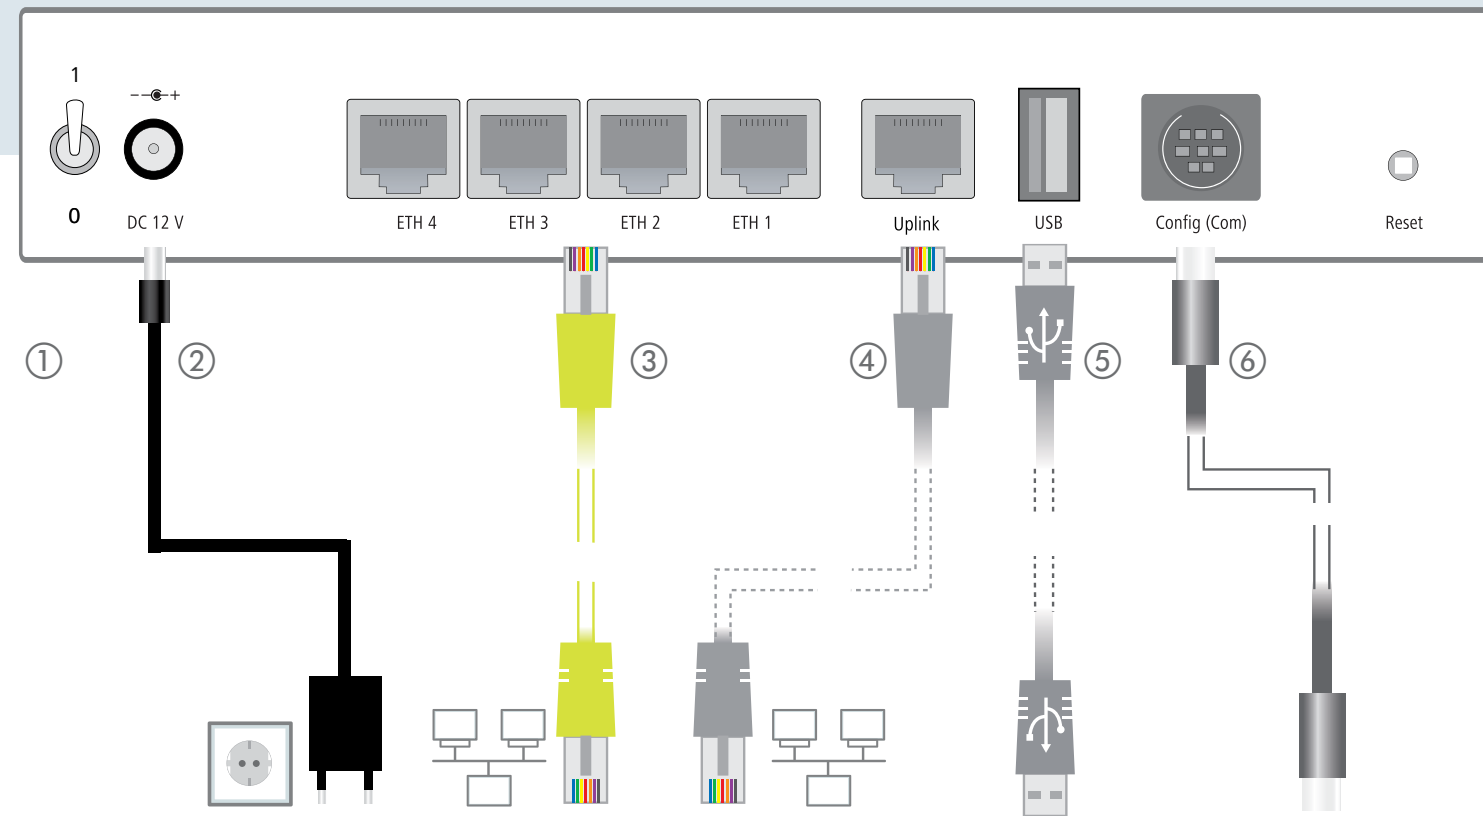

- On/off switch**
Use this switch to turn the device on or off.
- Power connector**
Supply the device with power. Use only the supplied power adapter.
- LAN**
Use the cable with the kiwi-colored connectors to connect one of the interfaces ETH1 to ETH4 to your PC or a LAN switch.
- Optional: Uplink**
Connect the Uplink interface to a LAN switch or a WAN modem with a suitable cable.
- Optional: USB**
You can use the USB interface to connect a USB printer or a USB flash drive for device configuration.
- Serial configuration cable**
You can connect the device to a PC with a configuration cable.

! Unplug the power plug from the power socket to ensure that the device is completely separated from the power supply!

MOUNTING AND CONNECTING THE DEVICE



1 Power

Off	Device switched off
Green on (permanently)	Device operational
Blinking green/orange	Configuration password not set. Without a configuration password, the configuration data in the device is unprotected.
Blinking red	Charge or time limit reached

2 AP Status

Green on (permanently)	At least one active access point is connected and authenticated; no new and no missing access point.
Blinking green/orange	At least one new access point.
Red on (permanently)	The LANCOM WLAN controller is not yet operational; one of the following elements is missing: <ul style="list-style-type: none"> Root certificate Device certificate Current time Random number for the DTLS encryption
Blinking red	At least one of the expected access points is missing.

3 Uplink

Off	No networking device attached
Green on (permanently)	Connection to network device operational, no data traffic
Flickering green	Data transmission

4 ETH

Off	No networking device attached
Green on (permanently)	Connection to network device operational, no data traffic
Flickering green	Data transmission

5 Online

Off	WAN connection inactive
Green on (permanently)	WAN connection active
Red on (permanently)	WAN connection error

6 VPN

Off	No VPN connection active
Green on (permanently)	VPN connection active
Blinking green	Establishing VPN connections

Hardware	
Power supply	12 V DC, external power adapter (230 V)
Power consumption	7.5 W
Environment	Temperature range 5–40°C; humidity 0-95%; non-condensing
Housing	Robust synthetic housing, rear connectors, ready for wall mounting, Kensington lock; measures 210 x 45 x 140 mm (W x H x D)
Number of fans	None; fanless design, no rotating parts, high MTBF

Interfaces	
ETH	4 individual ports, 10/100 Mbps Fast Ethernet. Each Ethernet port can be freely configured (LAN, WAN, monitor port, off). LAN ports operate in switch mode or isolated. Additionally, external DSL modems or termination routers can be operated at the WAN port together with policy-based routing.
USB	USB 2.0 Hi-Speed host port for connecting USB printers (USB print server) or USB data media (FAT file system)
Config (Com)	Serial configuration interface / COM port (8-pin Mini-DIN): 9,600 - 115,000 baud, suitable for optional connection of analog/GPRS modems. Supports the internal COM-port server.
Uplink	10/100 Mbps Fast Ethernet

WAN protocols	
Ethernet	PPPoE, Multi-PPPoE, ML-PPP, PPTP (PAC or PNS) and plain Ethernet (with or without DHCP), RIP-1, RIP-2, VLAN, IP

Declaration of conformity	
CE	EN 55024, EN 60950

Package content	
Manual	Quick Reference Guide (DE/EN), Installation Guide (DE/EN/FR/ES/IT/PT/NL)
CD/DVD	Data medium with firmware, management software (LANconfig, LANmonitor) and documentation
Cable	Ethernet cable, 3m (kiwi-colored connectors)
Cable	Serial configuration cable, 1.5 m
WLC Public Spot	Function included in firmware as of LCOS version 7.5
Power adapter	External power supply adapter (230V), NEST 12W/1.5A DC/5, barrel connector 2.1/5.5mm, for EU LANCOM item no. 110758, for UK LANCOM item no. 110722